


AD00.00-D-2000-04SD	Connect STAR DIAGNOSIS and read out fault memory		
---------------------	--	--	--

1 *Multiplexer*

X11 *Diagnostic socket (16-pin)*

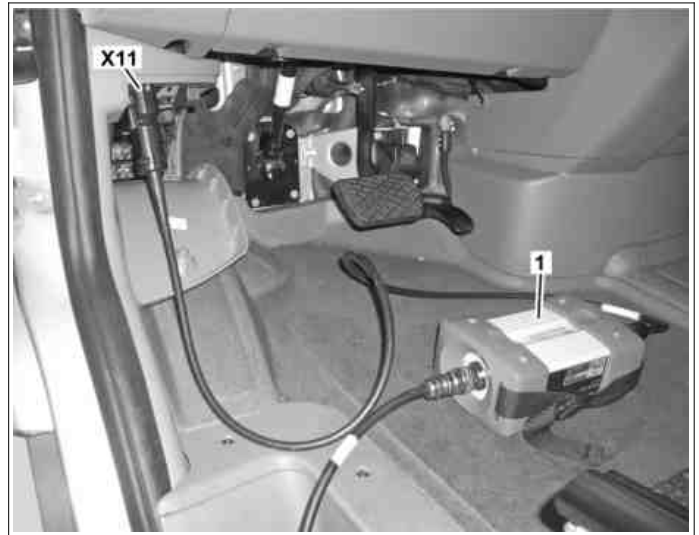

D54.22-0003-11

- 1 Connect Star Diagnosis with multiplexer (1) to the 16-pin diagnostic socket (X11).
☐ Ensure that plug of multiplexer (1) locks in position.
- 2 Switch on ignition.
- 3 Start Diagnosis Assistance System (DAS) application.
☐ Stored faults which may be caused by disconnecting cables or by simulation during testing operations must be deleted in the diagnostic trouble code memory following the completion of the operations.
- 4 Disconnect Star Diagnosis with multiplexer (1) in reverse order.