


→ faucet handle, never closed, in state. I could not get water from the faucet with pump and city water. The pump would not stop running when faucet was turned off. I observed that the pump was running all the time and then discovered that the pump was running all the time and then discovered that the pump was running all the time.

If city water is not available, or will not be available at your destination, the Airstream self-contained water system may be used. The lightweight polyethylene water tank stores 30 gallons of tasteless, odorless, clean fresh water for all your needs. The new Airstream pressure-demand water pump runs whenever a faucet is open and shuts off almost immediately when the faucet is closed, silently delivering 4.3 gallons per minute under constant pressure. To fill the water storage tank, remove the filler cap and fill the tank with a water hose or bucket, or through the city water crossover valve as described earlier. The tank may be filled until the water entry pipe is overflowing. Replace the cap... the water system is now ready for use. Remember, if you have been hooked up to city water your tank will not have been filled, unless the crossover valve has been opened, so be sure to fill it before leaving. If the hot water tank was completely empty it must be refilled before lighting by opening a hot water faucet and waiting until water comes out the faucet.

The Airstream pressure-demand water pump is conveniently located under the left-hand side of the front lounge. To gain access to the pump, pull the lounge out, remove the filler mattress, and lift off the loose plywood cover on the left-hand side of the lounge. This will give complete access to the pump, the water tank filler valve, the drain valve, and the water screen. NOTE: before leaving your Airstream unattended for any length of time, it is advisable to turn off the water pump at the galley switch.

FIGURE 12-A

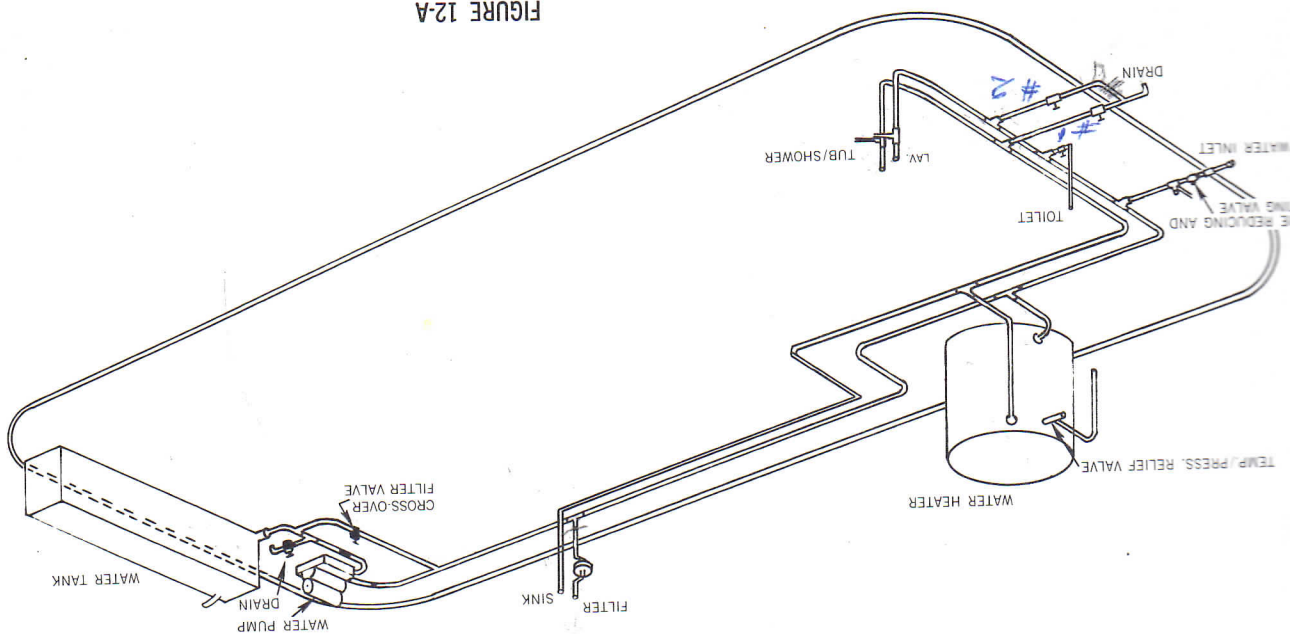

THE WATER SYSTEM

to show system in Airstream. The water system is shown in the diagram. The water system is shown in the diagram. The water system is shown in the diagram.

The water system in your Airstream trailer provides full service both when city water is available and when the trailer is operated completely self-contained. When you are operating your water system from a city water service, connect a hose to the water entry fitting located on the left side of the trailer. Since the system is completely automatic, nothing else needs to be done before you utilize the entire water system, except to turn the switch on the water pump to the "Off" position. - *switch is water pump*

If the water system has previously been drained it will be necessary for you to force the air from the water heater before lighting the water heater. Open a hot water faucet and allow all of the air to be forced through. If you plan to remain for some time where city water is available, drain the water storage tank and refill with fresh water before departing. Your system has check valves in the water lines to protect the water tank and, therefore will not fill while you are connected to city water, unless the crossover filler valve is opened. This crossover filler valve is located adjacent to the water pump underneath the front lounge on the left side of the trailer. It should always be kept in the "Off" position unless the water tank is being filled from the city water source. To fill the water tank when the trailer is connected to city water, merely turn this crossover valve to the "On" position and remove the filler cap from the water tank. Removal of the filler cap will preclude the water tank from being pressurized from the city water pressure, which could cause a potential failure in the tank.

Water weight 8 1/2 pounds per gallon. I filled the water tank through the front pump in the tank. I filled the water tank through the front pump in the tank. I filled the water tank through the front pump in the tank.