


5/29/15

310 Generator Fuel Pump wiring

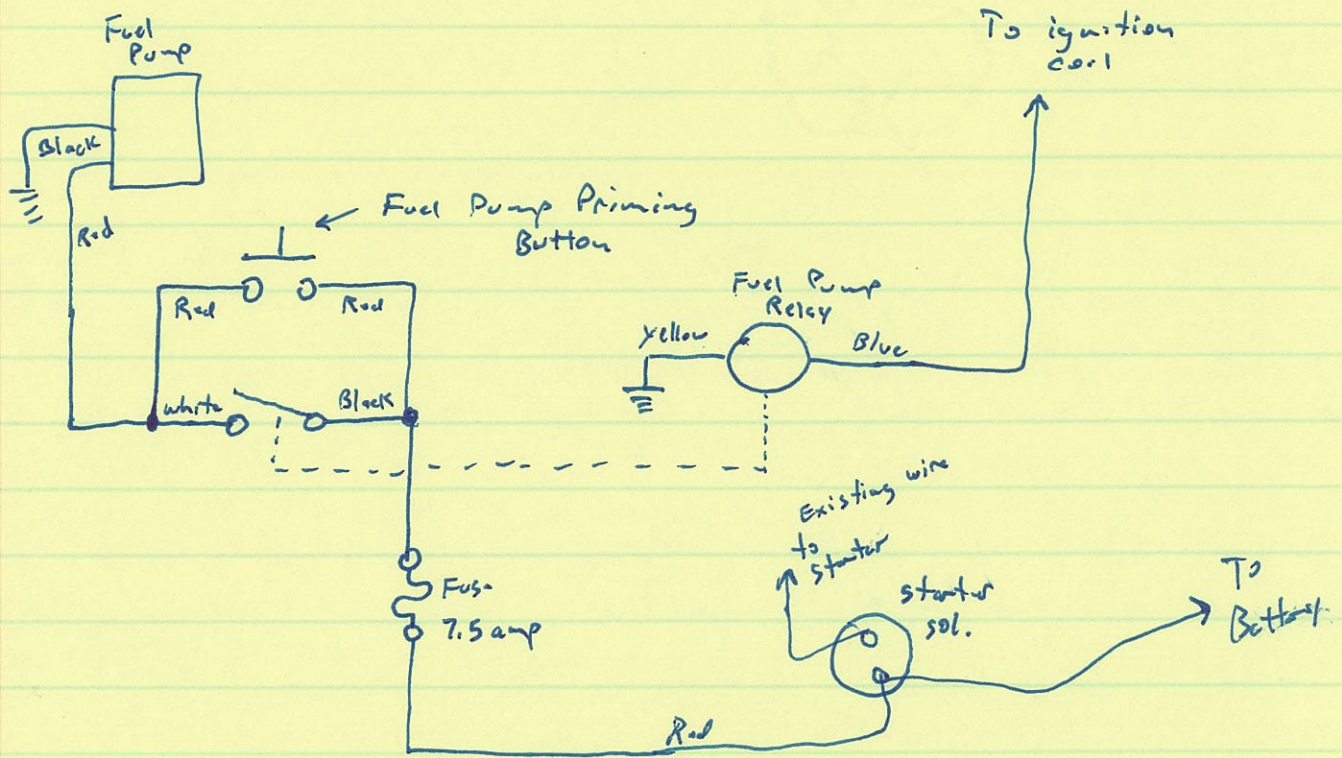

The Fuel Pump Primer Button should be used to pull fuel from the Tank up to the generator if it has ~~settling~~ ^{sitting} for a while without being started.

The Fuel pump used to be wired directly to the ignition coil. That pulls down the voltage at the coil especially when starting. The relay relieves the current draw of the Pump from the starting circuit.