


Rear Air switch

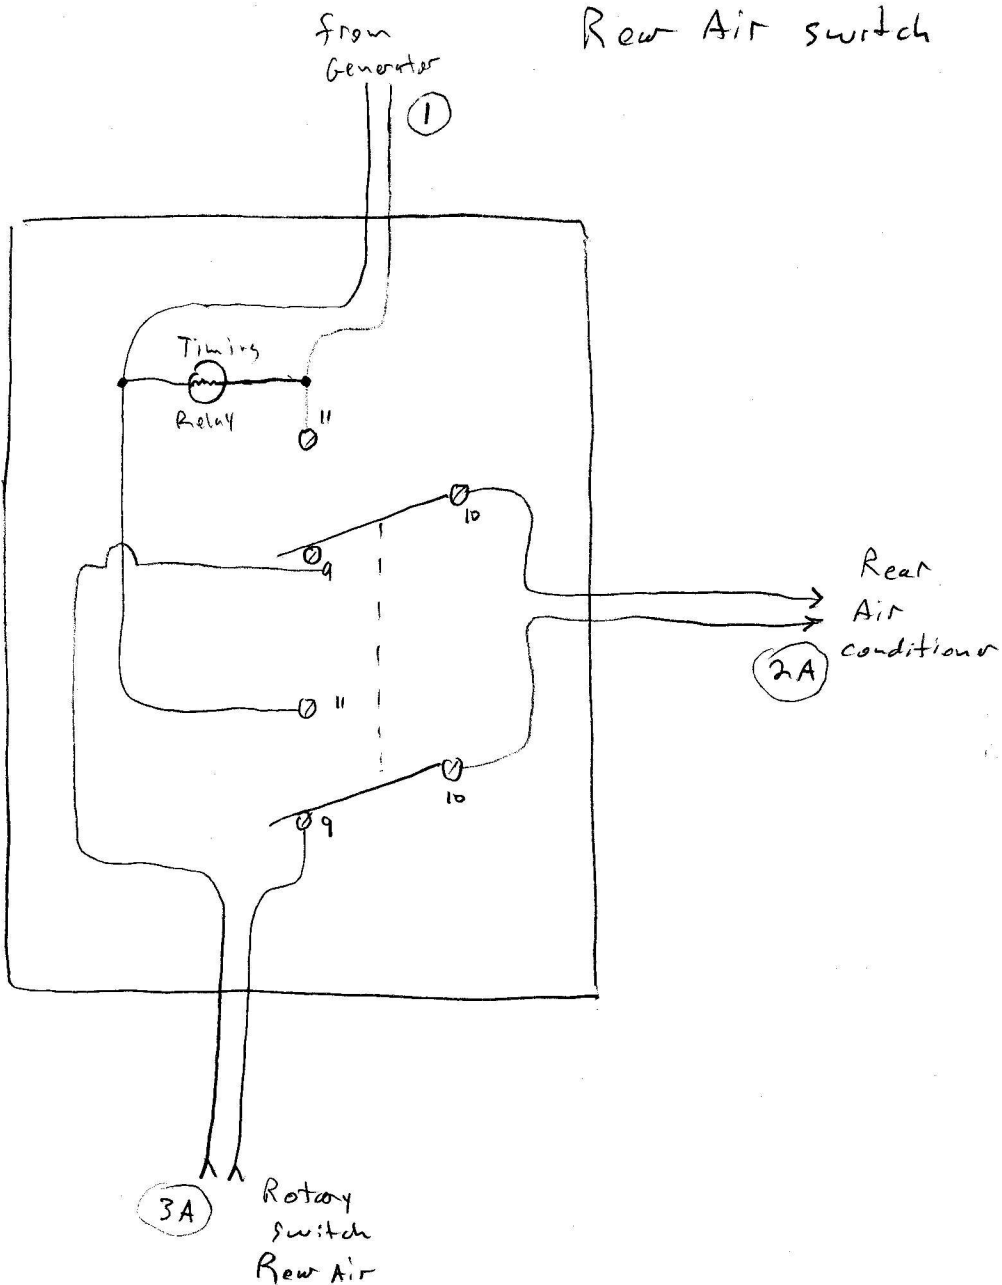

DeSault is selector switch feeds Rear Air 9 to 10.
 When generator Powers up the relay times out
 and closes 10 to 11 allowing generator to feed
 Rear Air