


AIRSTREAM
1984 310
MOTOR HOME

Shore Power

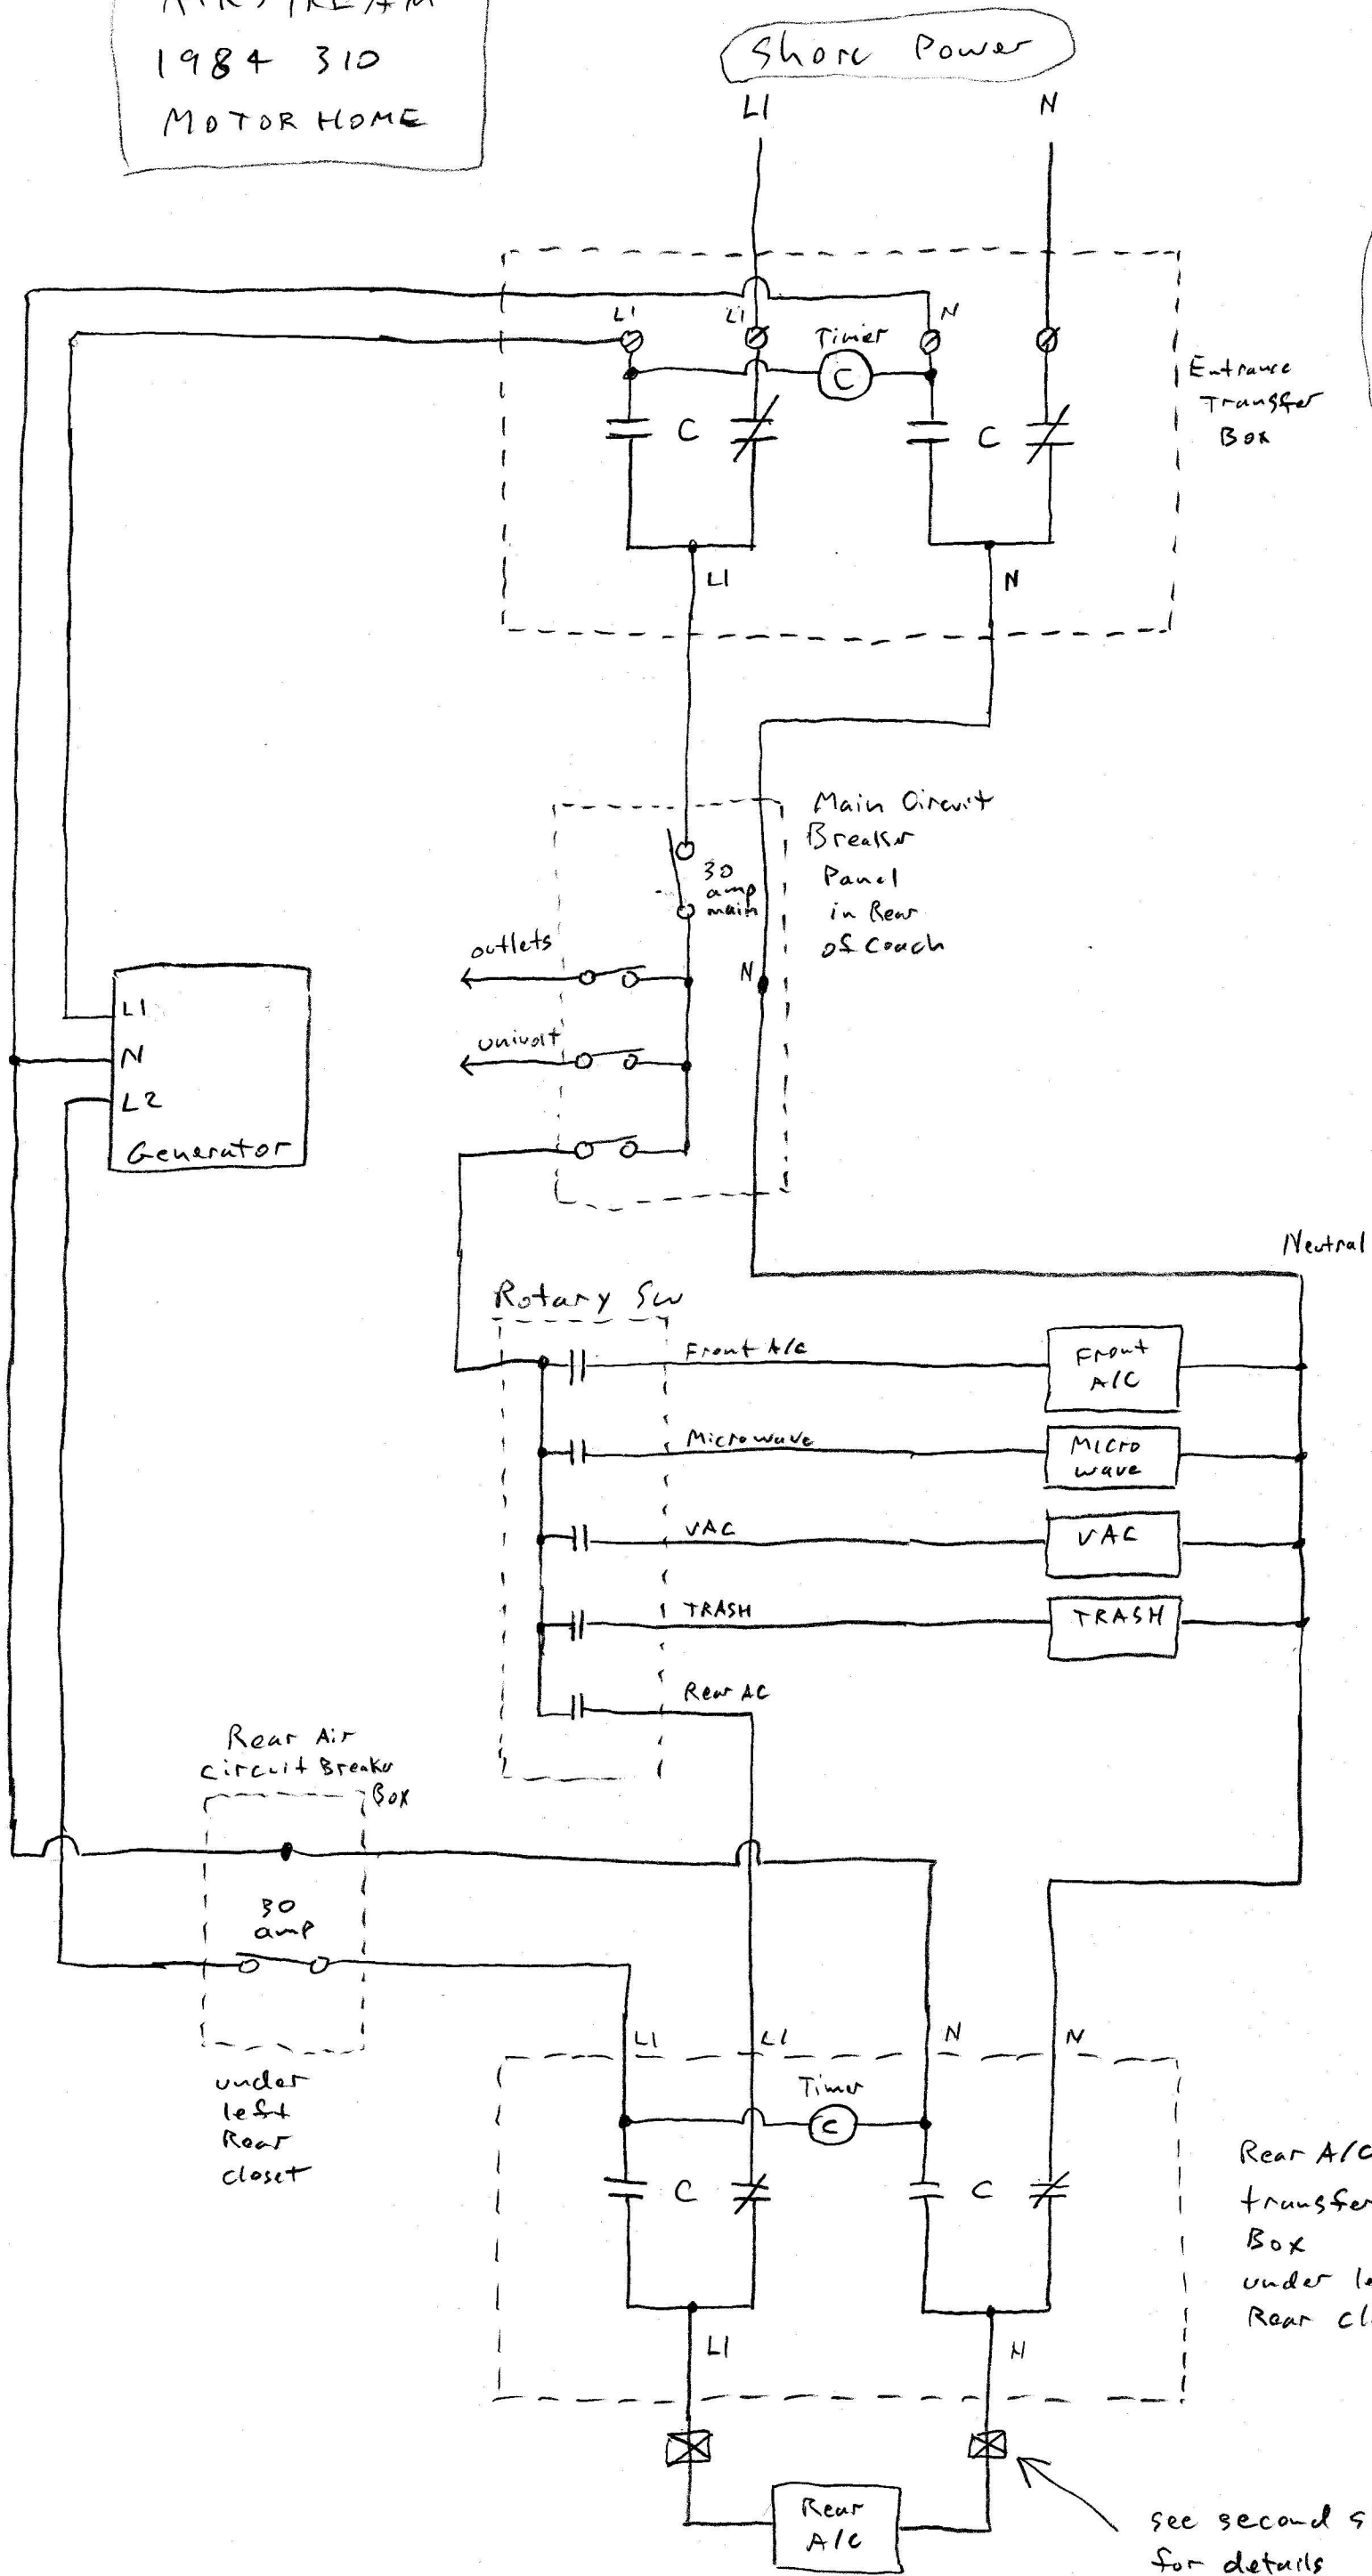

Break before
make Contacts
on Transfer
Relays

Note:

Neutral is NOT
Bonded to Ground

Neutral

see second sketch
for details