


# SEALING COLLAR INSTRUCTIONS

Use the Maringo Sealing Collar to:

1. Join adapters and cordsets.
2. Join cordsets in a series.



1

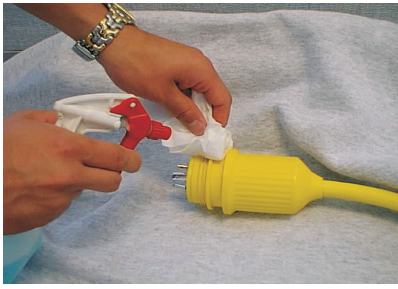

2 Apply soap solution to shoulder of boot (plug side) and to rear opening of ring.



3 With a twisting motion, force ring **past** shoulder of boot. (Use same procedure for connector.)



4 Push sealing collar **all the way** on either boot (to shoulder) and secure threaded ring.



5 Engage devices and **lock**.



6 Secure second threaded ring.

# MARINCO

05/01/99

100408 REV. 00

2655 Napa Valley Corporate Drive  
Napa, CA 94558  
(707) 226-8600 FAX: (707) 226-9670


# SEALING COLLAR INSTRUCTIONS

Use the Maringo Sealing Collar to:

1. Join adapters and cord sets
2. Join cordsets in a series.



1

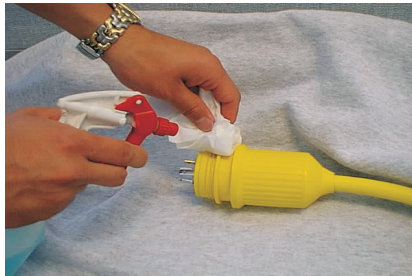

2 Apply soap solution to shoulder of boot (plug side) and to rear opening of ring.



3 With a twisting motion, force ring **past** shoulder of boot. (Use same procedure for connector.)



4 Push sealing collar **all the way** on either boot (to shoulder) and secure threaded ring.



5 Engage devices and **lock**.



6 Secure second threaded ring.

# MARINCO

05/01/99

100408 REV. 00

2655 Napa Valley Corporate Drive  
Napa, CA 94558  
(707) 226-8600 FAX: (707) 226-9670